
## How to measure cable length and length tolerances

Cable measurements are taken differently based on the connector type:

Male Connector Measure tip to tip

Female Connector Measure pin to pin

Connector goes thru panel Measure where it mounts to panel

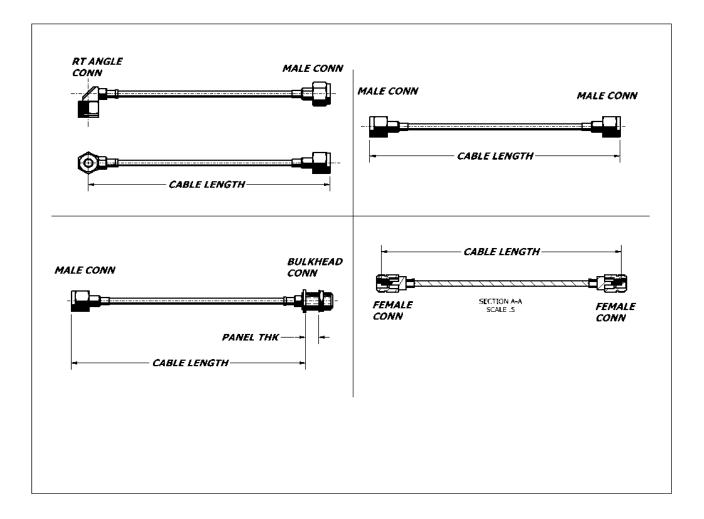

Cable Length	Tolerance
0"-60" or 0" - 5'	+0.50"
61" - 120" <i>or</i> 5'-1" - 10'	+1.0"
121" - 480" <i>or</i> 10'-1" - 40'	+2.0"
481" up <i>or</i> 40'-1" up	+3.0"

Raw cable length tolerance is +/- 10%